


Article information - SET1102, TIMKEN Wheel Bearing

Manufacturer	TIMKEN	
Article number	SET1102	
Description	Wheel Bearing	
Trade numbers	33116	
Status	Normal	
Packing unit	1	
Quantity per packing unit	1	
GTIN/EAN		

Criteria

Width [mm]	37
Outer Diameter [mm]	130
Inner Diameter [mm]	80
Weight [kg]	1.83

Documents

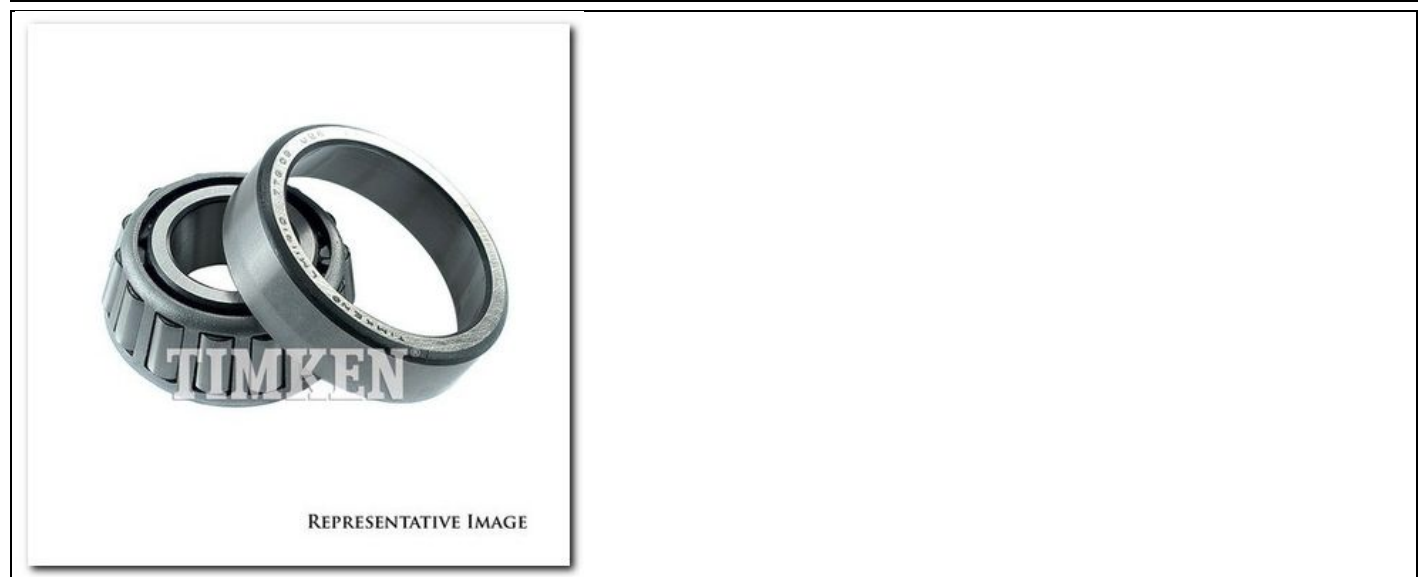

Axle linkages

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - H 6500-9				- 6500		1861
Fitting Position inner						
BPW - H - H 9100				- 9100		1862
Fitting Position inner						
BPW - H - H 9200				- 9200		1863
Fitting Position inner						
BPW - H - HB 6510				- 6500		1865
Fitting Position inner						
BPW - H - HB 8010				- 8000		1866
Fitting Position inner						
BPW - H - HB 8010-15				- 8000		1867
Fitting Position inner						
BPW - H - HB 9010				- 9000		1868
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HB 9010-15				- 9000		1869
Fitting Position inner						
BPW - H - HBF 6510				- 6500		1870
Fitting Position inner						
BPW - H - HBF 6510 ECO				- 6500		1871
Fitting Position inner						
BPW - H - HBF 6510-15				- 6500		1872
Fitting Position inner						
BPW - H - HBF 7010 ECO				- 7000		1873
Fitting Position inner						
BPW - H - HBF 8010				- 8000		1874
Fitting Position inner						
BPW - H - HBF 8010-15				- 8000		1875
Fitting Position inner						
BPW - H - HBF 8010-15 ECO				- 8000		1876
Fitting Position inner						
BPW - H - HBF 9010				- 9000		1877
Fitting Position inner						
BPW - H - HBF 9010 ECO				- 9000		1878
Fitting Position inner						
BPW - H - HBF 9010-15				- 9000		1879
Fitting Position inner						
BPW - H - HBF 9010-15 ECO				- 9000		1880
Fitting Position inner						
BPW - H - HBF 9210				- 9200		1881
Fitting Position inner						
BPW - H - HBFH 6510				- 6500		1882
Fitting Position inner						
BPW - H - HBFH 6510 ECO				- 6500		1883
Fitting Position inner						
BPW - H - HBFH 6510-15				- 6500		1884
Fitting Position inner						
BPW - H - HBFH 6510-15 ECO				- 6500		1885
Fitting Position inner						
BPW - H - HBFH 9010 ECO				- 9000		1886
Fitting Position inner						
BPW - H - HBFH 9010-15 ECO				- 9000		1887
Fitting Position inner						
BPW - H - HBFHLL 8010/12°				- 8000		1888
Fitting Position inner						
BPW - H - HBFHLL 9010/12°				- 9000		1889
Fitting Position inner						
BPW - H - HBFHLL 9010/12° ECO				- 9000		1890
Fitting Position inner						
BPW - H - HBFHLL 9210/12°				- 9200		1891
Fitting Position inner						
BPW - H - HBFHOT 6510 D36-1				- 6500		1892
Fitting Position inner						
BPW - H - HBFHOT 6510 T30				- 6500		1893
Fitting Position inner						
BPW - H - HBFHOTA 6510 D30				- 6500		1894
Fitting Position inner						
BPW - H - HBFHOTR 6510 D30				- 6500		1895
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HBFL 8010				- 8000		1896
Fitting Position inner						
BPW - H - HBFL 8010/12° ECO				- 8000		1897
Fitting Position inner						
BPW - H - HBFL 8010/20°				- 8000		1898
Fitting Position inner						
BPW - H - HBFL 9010				- 9000		1899
Fitting Position inner						
BPW - H - HBFL 9010/12° ECO				- 9000		1900
Fitting Position inner						
BPW - H - HBFL 9010/15°				- 9000		1901
Fitting Position inner						
BPW - H - HBFL 9010/20°				- 9000		1902
Fitting Position inner						
BPW - H - HBFLS 9010				- 9000		1903
Fitting Position inner						
BPW - H - HBFO 6510 D30				- 6500		1904
Fitting Position inner						
BPW - H - HBFOM 6510 D30				- 6500		1905
Fitting Position inner						
BPW - H - HBFOMA 6510 D30				- 6500		1906
Fitting Position inner						
BPW - H - HBFOMN 6510 D30				- 6500		1907
Fitting Position inner						
BPW - H - HBFOMN 6510 D36				- 6500		1908
Fitting Position inner						
BPW - H - HBFOMR 6510 D30				- 6500		1909
Fitting Position inner						
BPW - H - HBFOR 6510 D30				- 6500		1910
Fitting Position inner						
BPW - H - HBH 6510				- 6500		1911
Fitting Position inner						
BPW - H - HBHOTA 6510				- 6500		1912
Fitting Position inner						
BPW - H - HBM 6510				- 6500		1914
Fitting Position inner						
BPW - H - HBM 6510 ECO				- 6500		1915
Fitting Position inner						
BPW - H - HBM 7010 ECO				- 7000		1916
Fitting Position inner						
BPW - H - HBM 8010				- 8000		1917
Fitting Position inner						
BPW - H - HBM 8010-15				- 8000		1918
Fitting Position inner						
BPW - H - HBM 9010				- 9000		1919
Fitting Position inner						
BPW - H - HBM 9010 ECO				- 9000		1920
Fitting Position inner						
BPW - H - HBM 9010-15				- 9000		1921
Fitting Position inner						
BPW - H - HBM 9010-15 ECO				- 9000		1922
Fitting Position inner						
BPW - H - HBM 9210				- 9200		1923
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HBMH 6510				- 6500		1924
Fitting Position inner						
BPW - H - HBMH 8010-15				- 8000		1925
Fitting Position inner						
BPW - H - HBMH 9010				- 9000		1926
Fitting Position inner						
BPW - H - HBMH 9010-15				- 9000		1927
Fitting Position inner						
BPW - H - HBMHLS 8010/12°				- 8000		1928
Fitting Position inner						
BPW - H - HBMHLS 9010/12°				- 9000		1929
Fitting Position inner						
BPW - H - HBMHLS 9010/15° (17°)				- 9000		1930
Fitting Position inner						
BPW - H - HBMHONT 6510				- 6500		1931
Fitting Position inner						
BPW - H - HBMHONTA 6510				- 6500		1932
Fitting Position inner						
BPW - H - HBMHOT 6510				- 6500		1933
Fitting Position inner						
BPW - H - HBMHOT 6510 D30				- 6500		1934
Fitting Position inner						
BPW - H - HBMHOTA 9010				- 9000		1935
Fitting Position inner						
BPW - H - HBMHOTR 8010 D36				- 8000		1936
Fitting Position inner						
BPW - H - HBMLL 8010				- 8000		1937
Fitting Position inner						
BPW - H - HBMLL 8010/15°				- 8000		1938
Fitting Position inner						
BPW - H - HBMLL 9010/12°				- 9000		1939
Fitting Position inner						
BPW - H - HBMLL 9010/20°				- 9000		1940
Fitting Position inner						
BPW - H - HBMLS 8010				- 8000		1941
Fitting Position inner						
BPW - H - HBMLS 9010				- 9000		1942
Fitting Position inner						
BPW - H - HBMLS 9010/12°				- 9000		1943
Fitting Position inner						
BPW - H - HBMO 6510				- 6500		1944
Fitting Position inner						
BPW - H - HBMO 6510 D30				- 6500		1945
Fitting Position inner						
BPW - H - HBMO 8010				- 8000		1946
Fitting Position inner						
BPW - H - HBMO 9010				- 9000		1947
Fitting Position inner						
BPW - H - HBMOM 6510				- 6500		1948
Fitting Position inner						
BPW - H - HBMOM 6510 C				- 6500		1949
Fitting Position inner						
BPW - H - HBMOM 6510 D30				- 6500		1950
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HBMOM 8010				- 8000		1951
Fitting Position inner						
BPW - H - HBMOM 9010				- 9000		1952
Fitting Position inner						
BPW - H - HBMOMA 8010				- 8000		1953
Fitting Position inner						
BPW - H - HBMOMN 6510 D30				- 6500		1954
Fitting Position inner						
BPW - H - HBMOMN 6510 D36				- 6500		1955
Fitting Position inner						
BPW - H - HBMOMR 6510				- 6500		1956
Fitting Position inner						
BPW - H - HBMOMR 6510 D30				- 6500		1957
Fitting Position inner						
BPW - H - HBMOMR 9010				- 9000		1958
Fitting Position inner						
BPW - H - HBMONA 6510				- 6500		1959
Fitting Position inner						
BPW - H - HBMOR 6510				- 6500		1960
Fitting Position inner						
BPW - H - HBMOR 6510 D30				- 6500		1961
Fitting Position inner						
BPW - H - HBMOT 6510				- 6500		1962
Fitting Position inner						
BPW - H - HBOM 6510				- 6500		1963
Fitting Position inner						
BPW - H - HI 6500				- 6500		1968
Fitting Position inner						
BPW - H - HI 8000				- 8000		1969
Fitting Position inner						
BPW - H - HI 9000				- 9000		1970
Fitting Position inner						
BPW - H - HI 9000-15				- 9000		1971
Fitting Position inner						
BPW - H - HI 9100				- 9100		1972
Fitting Position inner						
BPW - H - HI 9200				- 9200		1973
Fitting Position inner						
BPW - H - HIH 6500				- 6500		1974
Fitting Position inner						
BPW - H - HIH 8000				- 8000		1975
Fitting Position inner						
BPW - H - HIH 9000				- 9000		1976
Fitting Position inner						
BPW - H - HIHLL 9000/12°				- 9000		1977
Fitting Position inner						
BPW - H - HIHLS 9000/12°				- 9000		1978
Fitting Position inner						
BPW - H - HIHONTA 6500				- 6500		1979
Fitting Position inner						
BPW - H - HIHOT 6500				- 6500		1980
Fitting Position inner						
BPW - H - HIHOT 6500 D30				- 6500		1981
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HIVB 6500 K				- 6500		2009
Fitting Position inner						
BPW - H - HIVO 6500 A				- 6500		2010
Fitting Position inner						
BPW - H - HIVO 8000 A				- 8000		2011
Fitting Position inner						
BPW - H - HIZ 6500				- 6500		2020
Fitting Position inner						
BPW - H - HIZ 8000				- 8000		2021
Fitting Position inner						
BPW - H - HIZ 9000				- 9000		2022
Fitting Position inner						
BPW - H - HIZ 9000-15				- 9000		2023
Fitting Position inner						
BPW - H - HIZ 9200				- 9200		2024
Fitting Position inner						
BPW - H - HIZH 6500				- 6500		2031
Fitting Position inner						
BPW - H - HIZH 9000				- 9000		2032
Fitting Position inner						
BPW - H - HIZO 6500				- 6500		2035
Fitting Position inner						
BPW - H - HS 2/8010				- 8000		2058
Fitting Position inner						
BPW - H - HS 6508				- 6500		2061
Fitting Position inner						
BPW - H - HS 6508 ECO				- 6500		2062
Fitting Position inner						
BPW - H - HS 6508-15				- 6500		2063
Fitting Position inner						
BPW - H - HS 6510				- 6500		2064
Fitting Position inner						
BPW - H - HS 6510 7/8 IN				- 6500		2065
Fitting Position inner						
BPW - H - HS 8008				- 8000		2066
Fitting Position inner						
BPW - H - HS 8010				- 8000		2067
Fitting Position inner						
BPW - H - HS 8010 ECO				- 8000		2068
Fitting Position inner						
BPW - H - HS 8010 L				- 8000		2069
Fitting Position inner						
BPW - H - HS 8010-15				- 8000		2070
Fitting Position inner						
BPW - H - HS 9008				- 9000		2072
Fitting Position inner						
BPW - H - HS 9008-15				- 9000		2073
Fitting Position inner						
BPW - H - HS 9010				- 9000		2074
Fitting Position inner						
BPW - H - HS 9010 Y				- 9000		2075
Fitting Position inner						
BPW - H - HS 9010-10				- 9000		2076
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HS 9010-15				- 9000		2077
Fitting Position inner						
BPW - H - HS 9010-15L				- 9000		2078
Fitting Position inner						
BPW - H - HS 9010-20				- 9000		2079
Fitting Position inner						
BPW - H - HSF 6508 ECO-MAXX				- 6500		2114
Fitting Position inner						
BPW - H - HSF 6510				- 6500		2115
Fitting Position inner						
BPW - H - HSF 6510 ECO				- 6500		2116
Fitting Position inner						
BPW - H - HSF 6510 ECO-MAXX				- 6500		2117
Fitting Position inner						
BPW - H - HSF 6710				- 6700		2118
Fitting Position inner						
BPW - H - HSF 8010				- 8000		2119
Fitting Position inner						
BPW - H - HSF 8010 ECO				- 8000		2120
Fitting Position inner						
BPW - H - HSF 8010 ECO-MAXX				- 8000		2121
Fitting Position inner						
BPW - H - HSF 8010-15				- 8000		2122
Fitting Position inner						
BPW - H - HSF 8010-15 ECO				- 8000		2123
Fitting Position inner						
BPW - H - HSF 8010-15 ECO-MAXX				- 8000		2124
Fitting Position inner						
BPW - H - HSF 9010				- 9000		2125
Fitting Position inner						
BPW - H - HSF 9010 ECO				- 9000		2126
Fitting Position inner						
BPW - H - HSF 9010 ECO-MAXX				- 9000		2128
Fitting Position inner						
BPW - H - HSF 9010 MAXX				- 9000		2129
Fitting Position inner						
BPW - H - HSF 9010-10				- 9000		2130
Fitting Position inner						
BPW - H - HSF 9010-15				- 9000		2131
Fitting Position inner						
BPW - H - HSF 9010-15 ECO				- 9000		2132
Fitting Position inner						
BPW - H - HSF 9010-15 ECO-MAXX				- 9000		2134
Fitting Position inner						
BPW - H - HSF 9010-25				- 9000		2135
Fitting Position inner						
BPW - H - HSF 9210				- 9200		2136
Fitting Position inner						
BPW - H - HSF 9210 ECO				- 9200		2137
Fitting Position inner						
BPW - H - HSF 9210 ECO-MAXX				- 9200		2138
Fitting Position inner						
BPW - H - HSFA 9010 ECO-MAXX				- 9000		2139
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HSFA 9010-15 ECO-MAXX				- 9000		2140
Fitting Position inner						
BPW - H - HSFAH 9010 ECO-MAXX				- 9000		2141
Fitting Position inner						
BPW - H - HSFAHLL 9010/12° ECO-MAXX				- 9000		2142
Fitting Position inner						
BPW - H - HSFH 6510				- 6500		2160
Fitting Position inner						
BPW - H - HSFH 6510 ECO				- 6500		2161
Fitting Position inner						
BPW - H - HSFH 6510-15				- 6500		2162
Fitting Position inner						
BPW - H - HSFH 8010				- 8000		2163
Fitting Position inner						
BPW - H - HSFH 8010-15				- 8000		2164
Fitting Position inner						
BPW - H - HSFH 9010				- 9000		2165
Fitting Position inner						
BPW - H - HSFH 9010 ECO				- 9000		2166
Fitting Position inner						
BPW - H - HSFH 9010 ECO-MAXX				- 9000		2168
Fitting Position inner						
BPW - H - HSFH 9010-15				- 9000		2169
Fitting Position inner						
BPW - H - HSFH 9010-15 ECO				- 9000		2170
Fitting Position inner						
BPW - H - HSFH 9010-15 ECO-MAXX				- 9000		2172
Fitting Position inner						
BPW - H - HSFH 9110-15				- 9100		2173
Fitting Position inner						
BPW - H - HSFHLL 7510/12° ECO-MAXX				- 7500		2180
Fitting Position inner						
BPW - H - HSFHLL 8010/10°				- 8000		2181
Fitting Position inner						
BPW - H - HSFHLL 8010/12°				- 8000		2182
Fitting Position inner						
BPW - H - HSFHLL 9010/10°				- 9000		2183
Fitting Position inner						
BPW - H - HSFHLL 9010/12°				- 9000		2184
Fitting Position inner						
BPW - H - HSFHLL 9010/12° ECO				- 9000		2185
Fitting Position inner						
BPW - H - HSFHLL 9010/12° ECO-MAXX				- 9000		2187
Fitting Position inner						
BPW - H - HSFHLL 9210/12°				- 9200		2188
Fitting Position inner						
BPW - H - HSFHLL 9210/12° ECO				- 9200		2189
Fitting Position inner						
BPW - H - HSFHLS 9010/12°				- 9000		2191
Fitting Position inner						
BPW - H - HSFHLS 9010/15°				- 9000		2192
Fitting Position inner						
BPW - H - HSFHOLL 9010 D36/12°				- 9000		2193
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HSFHOTLL 9010 D36/12°				- 9000		2194
Fitting Position inner						
BPW - H - HSFHOTLL 9210 D36/12°				- 9200		2195
Fitting Position inner						
BPW - H - HSFLL 8010/12°				- 8000		2202
Fitting Position inner						
BPW - H - HSFLL 8010/15°				- 8000		2203
Fitting Position inner						
BPW - H - HSFLL 9010				- 9000		2204
Fitting Position inner						
BPW - H - HSFLL 9010/12°				- 9000		2205
Fitting Position inner						
BPW - H - HSFLL 9010/12° ECO				- 9000		2206
Fitting Position inner						
BPW - H - HSFLL 9010/12° ECO-MAXX				- 9000		2208
Fitting Position inner						
BPW - H - HSFLL 9010/15°				- 9000		2209
Fitting Position inner						
BPW - H - HSFLL 9010/20°				- 9000		2210
Fitting Position inner						
BPW - H - HSFLL 9010/20° ECO				- 9000		2211
Fitting Position inner						
BPW - H - HSFLL 9210				- 9200		2212
Fitting Position inner						
BPW - H - HSFLL 9210/12°				- 9200		2213
Fitting Position inner						
BPW - H - HSFLL 9210/12° ECO				- 9200		2214
Fitting Position inner						
BPW - H - HSFLL 9210/15°				- 9200		2215
Fitting Position inner						
BPW - H - HSFLS 8010				- 8000		2216
Fitting Position inner						
BPW - H - HSFLS 9010				- 9000		2217
Fitting Position inner						
BPW - H - HSFLS 9010/12°				- 9000		2218
Fitting Position inner						
BPW - H - HSFLS 9010/15°				- 9000		2219
Fitting Position inner						
BPW - H - HSFO 6510 D30				- 6500		2221
Fitting Position inner						
BPW - H - HSFO 6510 D36				- 6500		2222
Fitting Position inner						
BPW - H - HSFO 8010 D36				- 8000		2223
Fitting Position inner						
BPW - H - HSFO 9010 D36				- 9000		2224
Fitting Position inner						
BPW - H - HSFO 9010 D36 ECO				- 9000		2225
Fitting Position inner						
BPW - H - HSFOA 9010 D36				- 9000		2226
Fitting Position inner						
BPW - H - HSFOA 9010 D36 ECO				- 9000		2227
Fitting Position inner						
BPW - H - HSFOM 6510 D30				- 6500		2229
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HSFOM 6510 D36				- 6500		2230
Fitting Position inner						
BPW - H - HSFOM 9010 D				- 9000		2231
Fitting Position inner						
BPW - H - HSFOM 9010 D30				- 9000		2232
Fitting Position inner						
BPW - H - HSFOM 9010 D36				- 9000		2233
Fitting Position inner						
BPW - H - HSFOM 9010 D36 ECO				- 9000		2234
Fitting Position inner						
BPW - H - HSFOMN 6510 D30				- 6500		2235
Fitting Position inner						
BPW - H - HSFOMN 6510 D36				- 6500		2236
Fitting Position inner						
BPW - H - HSFOMN 9010 D36				- 9000		2237
Fitting Position inner						
BPW - H - HSFOMR 6510 D30				- 6500		2238
Fitting Position inner						
BPW - H - HSFOMR 6510 D36				- 6500		2239
Fitting Position inner						
BPW - H - HSFOMR 9010 D36				- 9000		2240
Fitting Position inner						
BPW - H - HSFOR 6510 D30				- 6500		2241
Fitting Position inner						
BPW - H - HSFOR 9010 D36				- 9000		2242
Fitting Position inner						
BPW - H - HSFOT 9210 D36				- 9200		2243
Fitting Position inner						
BPW - H - HSFOTLL 9010 D36				- 9000		2244
Fitting Position inner						
BPW - H - HSFOTLL 9010 D36-1				- 9000		2245
Fitting Position inner						
BPW - H - HSFOTLL 9210 D36/12° ECO				- 9200		2246
Fitting Position inner						
BPW - H - HSFVB 8010 K				- 8000		2247
Fitting Position inner						
BPW - H - HSFVB 9010 K				- 9000		2248
Fitting Position inner						
BPW - H - HSFVBU 9010 K				- 9000		2249
Fitting Position inner						
BPW - H - HSH 6510				- 6500		2256
Fitting Position inner						
BPW - H - HSH 8010				- 8000		2257
Fitting Position inner						
BPW - H - HSH 8010-15				- 8000		2258
Fitting Position inner						
BPW - H - HSH 9010				- 9000		2259
Fitting Position inner						
BPW - H - HSH 9010-10				- 9000		2260
Fitting Position inner						
BPW - H - HSH 9010-15				- 9000		2261
Fitting Position inner						
BPW - H - HSHLL 9010/12° ECO				- 9000		2262
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HSHLS 8010/12°				- 8000		2263
Fitting Position inner						
BPW - H - HSHLS 8010/24° (28)°				- 8000		2264
Fitting Position inner						
BPW - H - HSHLS 8010/35°				- 8000		2265
Fitting Position inner						
BPW - H - HSHLS 9010				- 9000		2266
Fitting Position inner						
BPW - H - HSHLS 9010/12°				- 9000		2267
Fitting Position inner						
BPW - H - HSHLS 9010/15(20°)				- 9000		2268
Fitting Position inner						
BPW - H - HSHLS 9010/15°				- 9000		2269
Fitting Position inner						
BPW - H - HSHOT 8010				- 8000		2273
Fitting Position inner						
BPW - H - HSHOTR 6510				- 6500		2274
Fitting Position inner						
BPW - H - HSHVOT 8010 A				- 8000		2275
Fitting Position inner						
BPW - H - HSL 8010 ECO				- 8000		2276
Fitting Position inner						
BPW - H - HSL 8010 ECO				- 8000		2277
Fitting Position inner						
BPW - H - HSLS 8010				- 8000		2278
Fitting Position inner						
BPW - H - HSLS 8010/12°				- 8000		2279
Fitting Position inner						
BPW - H - HSLS 8010/15°				- 8000		2280
Fitting Position inner						
BPW - H - HSLS 8010/24° (29)°				- 8000		2281
Fitting Position inner						
BPW - H - HSLS 9010				- 9000		2282
Fitting Position inner						
BPW - H - HSLS 9010/12°				- 9000		2283
Fitting Position inner						
BPW - H - HSLS 9010/15°				- 9000		2284
Fitting Position inner						
BPW - H - HSM 6508				- 6500		2310
Fitting Position inner						
BPW - H - HSM 6508 ECO				- 6500		2311
Fitting Position inner						
BPW - H - HSM 6510				- 6500		2312
Fitting Position inner						
BPW - H - HSM 7510				- 7500		2313
Fitting Position inner						
BPW - H - HSM 8010				- 8000		2314
Fitting Position inner						
BPW - H - HSM 8010-15				- 8000		2315
Fitting Position inner						
BPW - H - HSM 8510				- 8500		2316
Fitting Position inner						
BPW - H - HSM 8510 ECO				- 8500		2317
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HSM 8510-10 ECO				- 8500		2318
Fitting Position inner						
BPW - H - HSM 8510-15 ECO				- 8500		2319
Fitting Position inner						
BPW - H - HSM 9008-15				- 9000		2320
Fitting Position inner						
BPW - H - HSM 9010				- 9000		2321
Fitting Position inner						
BPW - H - HSM 9010 ECO				- 9000		2322
Fitting Position inner						
BPW - H - HSM 9010 ECO-MAXX				- 9000		2324
Fitting Position inner						
BPW - H - HSM 9010-10				- 9000		2325
Fitting Position inner						
BPW - H - HSM 9010-15				- 9000		2326
Fitting Position inner						
BPW - H - HSM 9010-15 ECO				- 9000		2327
Fitting Position inner						
BPW - H - HSM 9010-15 ECO-MAXX				- 9000		2329
Fitting Position inner						
BPW - H - HSM 9010-20				- 9000		2330
Fitting Position inner						
BPW - H - HSM 9110				- 9100		2331
Fitting Position inner						
BPW - H - HSM 9210				- 9200		2332
Fitting Position inner						
BPW - H - HSM 9210 ECO				- 9200		2333
Fitting Position inner						
BPW - H - HSMA 9010				- 9000		2334
Fitting Position inner						
BPW - H - HSMA 9010 ECO				- 9000		2335
Fitting Position inner						
BPW - H - HSMA 9010 ECO-MAXX				- 9000		2336
Fitting Position inner						
BPW - H - HSMA 9010-15 ECO-MAXX				- 9000		2337
Fitting Position inner						
BPW - H - HSMAH 9010 ECO				- 9000		2338
Fitting Position inner						
BPW - H - HSMAH 9010 ECO-MAXX				- 9000		2339
Fitting Position inner						
BPW - H - HSMAHLL 9010/12° ECO				- 9000		2340
Fitting Position inner						
BPW - H - HSMAHLL 9010/12° ECO-MAXX				- 9000		2341
Fitting Position inner						
BPW - H - HSMH 6508				- 6500		2354
Fitting Position inner						
BPW - H - HSMH 6508-15				- 6500		2355
Fitting Position inner						
BPW - H - HSMH 8010				- 8000		2356
Fitting Position inner						
BPW - H - HSMH 8010 ECO				- 8000		2357
Fitting Position inner						
BPW - H - HSMH 8010 ECO-MAXX				- 8000		2358
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HSMH 8010-15				- 8000		2359
Fitting Position inner						
BPW - H - HSMH 9010				- 9000		2360
Fitting Position inner						
BPW - H - HSMH 9010 ECO				- 9000		2361
Fitting Position inner						
BPW - H - HSMH 9010 ECO-MAXX				- 9000		2363
Fitting Position inner						
BPW - H - HSMH 9010-10				- 9000		2364
Fitting Position inner						
BPW - H - HSMH 9010-15				- 9000		2365
Fitting Position inner						
BPW - H - HSMH 9010-15 ECO				- 9000		2366
Fitting Position inner						
BPW - H - HSMH 9010-15 ECO-MAXX				- 9000		2367
Fitting Position inner						
BPW - H - HSMHA 9010 ECO				- 9000		2368
Fitting Position inner						
BPW - H - HSMHLL 8010/10°				- 8000		2374
Fitting Position inner						
BPW - H - HSMHLL 8010/12°				- 8000		2375
Fitting Position inner						
BPW - H - HSMHLL 9010/10°				- 9000		2376
Fitting Position inner						
BPW - H - HSMHLL 9010/10° ECO				- 9000		2377
Fitting Position inner						
BPW - H - HSMHLL 9010/12°				- 9000		2378
Fitting Position inner						
BPW - H - HSMHLL 9010/12° ECO				- 9000		2379
Fitting Position inner						
BPW - H - HSMHLL 9010/12° ECO-MAXX				- 9000		2381
Fitting Position inner						
BPW - H - HSMHLL 9210/12°				- 9200		2382
Fitting Position inner						
BPW - H - HSMHLS 8010/12°				- 8000		2383
Fitting Position inner						
BPW - H - HSMHLS 8010/24° (28)°				- 8000		2384
Fitting Position inner						
BPW - H - HSMHLS 9010/12°				- 9000		2385
Fitting Position inner						
BPW - H - HSMHLS 9010/15° (17°)				- 9000		2386
Fitting Position inner						
BPW - H - HSMHOT 6508 D30				- 6500		2388
Fitting Position inner						
BPW - H - HSMHOT 6508 D36-1				- 6500		2389
Fitting Position inner						
BPW - H - HSMHOT 9010 D36				- 9000		2390
Fitting Position inner						
BPW - H - HSMHOTLL 9010 D36-1/12°				- 9000		2391
Fitting Position inner						
BPW - H - HSMHOTR 6508 D30				- 6500		2392
Fitting Position inner						
BPW - H - HSMMLL 8010/12°				- 8000		2395
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HSMML 8010/15°				- 8000		2396
Fitting Position inner						
BPW - H - HSMML 9010				- 9000		2397
Fitting Position inner						
BPW - H - HSMML 9010/12°				- 9000		2398
Fitting Position inner						
BPW - H - HSMML 9010/12° ECO				- 9000		2399
Fitting Position inner						
BPW - H - HSMML 9010/12° ECO-MAXX				- 9000		2400
Fitting Position inner						
BPW - H - HSMML 9010/15°				- 9000		2402
Fitting Position inner						
BPW - H - HSMML 9010/20° ECO				- 9000		2403
Fitting Position inner						
BPW - H - HSMML 9210/12°				- 9200		2404
Fitting Position inner						
BPW - H - HSMML 9210/15°				- 9200		2405
Fitting Position inner						
BPW - H - HSMLS 8010				- 8000		2406
Fitting Position inner						
BPW - H - HSMLS 8010/15°				- 8000		2407
Fitting Position inner						
BPW - H - HSMLS 8010/15°D				- 8000		2408
Fitting Position inner						
BPW - H - HSMLS 9010				- 9000		2409
Fitting Position inner						
BPW - H - HSMLS 9010/12°				- 9000		2410
Fitting Position inner						
BPW - H - HSMLS 9010/15°				- 9000		2411
Fitting Position inner						
BPW - H - HSMO 6510 D30				- 6500		2413
Fitting Position inner						
BPW - H - HSMO 8010				- 8000		2414
Fitting Position inner						
BPW - H - HSMO 8010 D36				- 8000		2415
Fitting Position inner						
BPW - H - HSMO 9010				- 9000		2416
Fitting Position inner						
BPW - H - HSMO 9010 D36				- 9000		2417
Fitting Position inner						
BPW - H - HSMO 9010 ECO				- 9000		2418
Fitting Position inner						
BPW - H - HSMOM 6508 D30				- 6500		2422
Fitting Position inner						
BPW - H - HSMOM 6510				- 6500		2423
Fitting Position inner						
BPW - H - HSMOM 6510 D30				- 6500		2424
Fitting Position inner						
BPW - H - HSMOM 8010				- 8000		2425
Fitting Position inner						
BPW - H - HSMOM 9010				- 9000		2426
Fitting Position inner						
BPW - H - HSMOM 9010 D30				- 9000		2427
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HSMOM 9010 D36				- 9000		2428
Fitting Position inner						
BPW - H - HSMOMA 8010				- 8000		2429
Fitting Position inner						
BPW - H - HSMOMN 6508 D30				- 6500		2430
Fitting Position inner						
BPW - H - HSMOMN 9010 D30				- 9000		2431
Fitting Position inner						
BPW - H - HSMOMN 9010 D36				- 9000		2432
Fitting Position inner						
BPW - H - HSMOMR 6508 D30				- 6500		2434
Fitting Position inner						
BPW - H - HSMOMR 6510				- 6500		2435
Fitting Position inner						
BPW - H - HSMOMR 6510 D30				- 6500		2436
Fitting Position inner						
BPW - H - HSMOMR 8010				- 8000		2437
Fitting Position inner						
BPW - H - HSMOMR 9010				- 9000		2438
Fitting Position inner						
BPW - H - HSMOMR 9010 D30				- 9000		2439
Fitting Position inner						
BPW - H - HSMOMR 9010 D36				- 9000		2440
Fitting Position inner						
BPW - H - HSMOR 6510				- 6500		2442
Fitting Position inner						
BPW - H - HSMOR 6510 D30				- 6500		2443
Fitting Position inner						
BPW - H - HSMOR 8010				- 8000		2444
Fitting Position inner						
BPW - H - HSMOR 8010 D30				- 8000		2445
Fitting Position inner						
BPW - H - HSMOR 9010				- 9000		2446
Fitting Position inner						
BPW - H - HSMORU 9010				- 9000		2448
Fitting Position inner						
BPW - H - HSMOTLL 9010 D36/15°				- 9000		2449
Fitting Position inner						
BPW - H - HSMOTLL 9010 D36-1/12°				- 9000		2450
Fitting Position inner						
BPW - H - HSMOU 9010				- 9000		2452
Fitting Position inner						
BPW - H - HSMSS 2/8010				- 8000		2453
Fitting Position inner						
BPW - H - HSMVO 8010 A				- 8000		2456
Fitting Position inner						
BPW - H - HSMVO 8010 P				- 8000		2457
Fitting Position inner						
BPW - H - HSMVO 9010 A				- 9000		2458
Fitting Position inner						
BPW - H - HSMVOU 8010 A				- 8000		2459
Fitting Position inner						
BPW - H - HSMVOU 9010 A				- 9000		2460
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HSO 6508				- 6500		2463
Fitting Position inner						
BPW - H - HSO 6510				- 6500		2464
Fitting Position inner						
BPW - H - HSO 6510 D30				- 6500		2465
Fitting Position inner						
BPW - H - HSO 6510 D36				- 6500		2466
Fitting Position inner						
BPW - H - HSO 8008				- 8000		2467
Fitting Position inner						
BPW - H - HSO 8010				- 8000		2468
Fitting Position inner						
BPW - H - HSO 8010 D36				- 8000		2469
Fitting Position inner						
BPW - H - HSO 9010				- 9000		2470
Fitting Position inner						
BPW - H - HSO 9010 D36				- 9000		2471
Fitting Position inner						
BPW - H - HSOA 8010				- 8000		2472
Fitting Position inner						
BPW - H - HSOM 6510				- 6500		2475
Fitting Position inner						
BPW - H - HSOM 6510 D30				- 6500		2476
Fitting Position inner						
BPW - H - HSOM 8010				- 8000		2477
Fitting Position inner						
BPW - H - HSOM 8010 B				- 8000		2478
Fitting Position inner						
BPW - H - HSOM 9010				- 9000		2479
Fitting Position inner						
BPW - H - HSOM 9010 B				- 9000		2480
Fitting Position inner						
BPW - H - HSOM 9010 D36				- 9000		2481
Fitting Position inner						
BPW - H - HSOMA 9010				- 9000		2482
Fitting Position inner						
BPW - H - HSOMN 6510 D36				- 6500		2483
Fitting Position inner						
BPW - H - HSOMN 9010 D30				- 9000		2484
Fitting Position inner						
BPW - H - HSOMR 6508 D30				- 6500		2486
Fitting Position inner						
BPW - H - HSOMR 6510				- 6500		2487
Fitting Position inner						
BPW - H - HSOMR 6510 D30				- 6500		2488
Fitting Position inner						
BPW - H - HSOMR 8010				- 8000		2489
Fitting Position inner						
BPW - H - HSOMR 8010 D36				- 8000		2490
Fitting Position inner						
BPW - H - HSOMR 9010				- 9000		2491
Fitting Position inner						
BPW - H - HSOMR 9010 D36				- 9000		2492
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HSON 9010				- 9000		2493
Fitting Position inner						
BPW - H - HSOR 6510				- 6500		2495
Fitting Position inner						
BPW - H - HSOR 6510 D30				- 6500		2496
Fitting Position inner						
BPW - H - HSOR 6510 D36				- 6500		2497
Fitting Position inner						
BPW - H - HSOR 8010				- 8000		2498
Fitting Position inner						
BPW - H - HSOR 8010 D30				- 8000		2499
Fitting Position inner						
BPW - H - HSOR 9010				- 9000		2500
Fitting Position inner						
BPW - H - HSOR 9010 A				- 9000		2501
Fitting Position inner						
BPW - H - HSOR 9010 D36				- 9000		2502
Fitting Position inner						
BPW - H - HSOR 9010 E				- 9000		2503
Fitting Position inner						
BPW - H - HSOR 9010 P				- 9000		2504
Fitting Position inner						
BPW - H - HSORU 8010				- 8000		2507
Fitting Position inner						
BPW - H - HSORU 9010				- 9000		2508
Fitting Position inner						
BPW - H - HSOU 8010				- 8000		2510
Fitting Position inner						
BPW - H - HSOU 9010				- 9000		2511
Fitting Position inner						
BPW - H - HSP 8010				- 8000		2512
Fitting Position inner						
BPW - H - HSSS 2/8010				- 8000		2514
Fitting Position inner						
BPW - H - HSSS 2/9010/6				- 9000		2515
Fitting Position inner						
BPW - H - HSVB 6508 K				- 6500		2519
Fitting Position inner						
BPW - H - HSVB 6510 K				- 6500		2520
Fitting Position inner						
BPW - H - HSVB 8010 K				- 8000		2521
Fitting Position inner						
BPW - H - HSVB 9010 AK				- 9000		2522
Fitting Position inner						
BPW - H - HSVB 9010 K				- 9000		2523
Fitting Position inner						
BPW - H - HSVBU 8010 K				- 8000		2526
Fitting Position inner						
BPW - H - HSVO 8010 A				- 8000		2527
Fitting Position inner						
BPW - H - HSVO 9010 A				- 9000		2528
Fitting Position inner						
BPW - H - HSVOU 8010 A				- 8000		2529
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HSVOU 9010 A				- 9000		2530
Fitting Position inner						
BPW - H - HZ 6506 gekröpft				- 6500		2578
Fitting Position inner						
BPW - H - HZ 6508 ECO				- 6500		2579
Fitting Position inner						
BPW - H - HZ 6510				- 6500		2580
Fitting Position inner						
BPW - H - HZ 8010				- 8000		2581
Fitting Position inner						
BPW - H - HZ 8010 BUDD				- 8000		2582
Fitting Position inner						
BPW - H - HZ 9008				- 9000		2583
Fitting Position inner						
BPW - H - HZ 9008 JAPAN				- 9000		2584
Fitting Position inner						
BPW - H - HZ 9010				- 9000		2585
Fitting Position inner						
BPW - H - HZ 9010 7/8 IN				- 9000		2586
Fitting Position inner						
BPW - H - HZ 9010 SCANIA				- 9000		2587
Fitting Position inner						
BPW - H - HZ 9010-15				- 9000		2588
Fitting Position inner						
BPW - H - HZ 9010-15 7/8 IN				- 9000		2589
Fitting Position inner						
BPW - H - HZ 9110-10				- 9100		2590
Fitting Position inner						
BPW - H - HZ 9110				- 9100		2591
Fitting Position inner						
BPW - H - HZ 9110 7/8 IN				- 9100		2592
Fitting Position inner						
BPW - H - HZD 6508				- 6500		2600
Fitting Position inner						
BPW - H - HZD 6508 FORD				- 6500		2601
Fitting Position inner						
BPW - H - HZD 6510				- 6500		2602
Fitting Position inner						
BPW - H - HZD 8010				- 8000		2603
Fitting Position inner						
BPW - H - HZD 8010 VOLVO				- 8000		2604
Fitting Position inner						
BPW - H - HZD 9008				- 9000		2605
Fitting Position inner						
BPW - H - HZD 9008-15				- 9000		2606
Fitting Position inner						
BPW - H - HZD 9010				- 9000		2607
Fitting Position inner						
BPW - H - HZD 9010-15				- 9000		2608
Fitting Position inner						
BPW - H - HZDH 9010-15				- 9000		2610
Fitting Position inner						
BPW - H - HZDHOM 9010				- 9000		2611
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HZDHOT 9010				- 9000		2613
Fitting Position inner						
BPW - H - HZDO 6510 D30				- 6500		2617
Fitting Position inner						
BPW - H - HZDO 9010				- 9000		2618
Fitting Position inner						
BPW - H - HZDOM 6508				- 6500		2620
Fitting Position inner						
BPW - H - HZDOM 6510				- 6500		2621
Fitting Position inner						
BPW - H - HZDOM 8010				- 8000		2622
Fitting Position inner						
BPW - H - HZDOM 9010				- 9000		2623
Fitting Position inner						
BPW - H - HZDOMR 6508				- 6500		2626
Fitting Position inner						
BPW - H - HZDOMR 6510				- 6500		2627
Fitting Position inner						
BPW - H - HZDOMR 8010				- 8000		2628
Fitting Position inner						
BPW - H - HZDOMR 9010				- 9000		2629
Fitting Position inner						
BPW - H - HZDOMU 9010				- 9000		2631
Fitting Position inner						
BPW - H - HZDOR 6510				- 6500		2633
Fitting Position inner						
BPW - H - HZDOR 9010				- 9000		2634
Fitting Position inner						
BPW - H - HZDORU 9010				- 9000		2635
Fitting Position inner						
BPW - H - HZDOU 9010				- 9000		2636
Fitting Position inner						
BPW - H - HZDSS 2/8010/12				- 8000		2638
Fitting Position inner						
BPW - H - HZDVB 8010 K				- 8000		2641
Fitting Position inner						
BPW - H - HZF 6510				- 6500		2678
Fitting Position inner						
BPW - H - HZF 6510 ECO				- 6500		2679
Fitting Position inner						
BPW - H - HZF 8010				- 8000		2680
Fitting Position inner						
BPW - H - HZF 9010				- 9000		2681
Fitting Position inner						
BPW - H - HZF 9010 ECO				- 9000		2682
Fitting Position inner						
BPW - H - HZF 9010 ECO-MAXX				- 9000		2684
Fitting Position inner						
BPW - H - HZF 9010-15				- 9000		2685
Fitting Position inner						
BPW - H - HZF 9010-15 ECO				- 9000		2686
Fitting Position inner						
BPW - H - HZF 9010-15 ECO-MAXX				- 9000		2688
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HZF 9210				- 9200		2689
Fitting Position inner						
BPW - H - HZF 9210 ECO				- 9200		2690
Fitting Position inner						
BPW - H - HZFA 9010-15 ECO-MAXX				- 9000		2691
Fitting Position inner						
BPW - H - HZFD 6510				- 6500		2696
Fitting Position inner						
BPW - H - HZFD 8010				- 8000		2697
Fitting Position inner						
BPW - H - HZFD 9010				- 9000		2698
Fitting Position inner						
BPW - H - HZFD 9010-15				- 9000		2699
Fitting Position inner						
BPW - H - HZFD 9210				- 9200		2700
Fitting Position inner						
BPW - H - HZFDH 9010				- 9000		2703
Fitting Position inner						
BPW - H - HZFDH 9010-15				- 9000		2704
Fitting Position inner						
BPW - H - HZFDMN 9010 D36				- 9000		2705
Fitting Position inner						
BPW - H - HZFDOMR 9010 D36				- 9000		2706
Fitting Position inner						
BPW - H - HZFDOR 9010 D36				- 9000		2707
Fitting Position inner						
BPW - H - HZFDVB 6510 BK				- 6500		2708
Fitting Position inner						
BPW - H - HZFDVB 6510 K				- 6500		2709
Fitting Position inner						
BPW - H - HZFH 6510				- 6500		2728
Fitting Position inner						
BPW - H - HZFH 6510 ECO-MAXX				- 6500		2729
Fitting Position inner						
BPW - H - HZFH 9010 ECO				- 9000		2730
Fitting Position inner						
BPW - H - HZFH 9010-15				- 9000		2731
Fitting Position inner						
BPW - H - HZFH 9010-15 ECO				- 9000		2732
Fitting Position inner						
BPW - H - HZFH 9010-15 ECO-MAXX				- 9000		2734
Fitting Position inner						
BPW - H - HZFHLL 9010/12° ECO-MAXX				- 9000		2735
Fitting Position inner						
BPW - H - HZFHMOMN 9010 D36				- 9000		2736
Fitting Position inner						
BPW - H - HZFHOT 6510 D30				- 6500		2737
Fitting Position inner						
BPW - H - HZFLL 9010/12°				- 9000		2742
Fitting Position inner						
BPW - H - HZFLL 9010/12° ECO				- 9000		2743
Fitting Position inner						
BPW - H - HZFOM 9010 D36				- 9000		2745
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HZFOMA 9010 D30				- 9000		2746
Fitting Position inner						
BPW - H - HZFOMNA 9010 D30				- 9000		2747
Fitting Position inner						
BPW - H - HZFOMR 9010 D36				- 9000		2748
Fitting Position inner						
BPW - H - HZFOT 9210 D36				- 9200		2749
Fitting Position inner						
BPW - H - HZFFVB 9010 K				- 9000		2750
Fitting Position inner						
BPW - H - HZFFBU 9010 K				- 9000		2751
Fitting Position inner						
BPW - H - HZH 9010-15				- 9000		2757
Fitting Position inner						
BPW - H - HZHLL 9010/12° 7/8 IN ECO				- 9000		2758
Fitting Position inner						
BPW - H - HZM 6508				- 6500		2796
Fitting Position inner						
BPW - H - HZM 6508 ECO				- 6500		2797
Fitting Position inner						
BPW - H - HZM 6510				- 6500		2798
Fitting Position inner						
BPW - H - HZM 8010				- 8000		2799
Fitting Position inner						
BPW - H - HZM 9010				- 9000		2800
Fitting Position inner						
BPW - H - HZM 9010 ECO				- 9000		2801
Fitting Position inner						
BPW - H - HZM 9010 ECO-MAXX				- 9000		2802
Fitting Position inner						
BPW - H - HZM 9010-15				- 9000		2803
Fitting Position inner						
BPW - H - HZM 9010-15 ECO				- 9000		2804
Fitting Position inner						
BPW - H - HZM 9010-15 ECO-MAXX				- 9000		2806
Fitting Position inner						
BPW - H - HZM 9110				- 9100		2807
Fitting Position inner						
BPW - H - HZM 9210				- 9200		2808
Fitting Position inner						
BPW - H - HZMA 9010 ECO-MAXX				- 9000		2809
Fitting Position inner						
BPW - H - HZMA 9010-15				- 9000		2810
Fitting Position inner						
BPW - H - HZMA 9010-15 ECO-MAXX				- 9000		2811
Fitting Position inner						
BPW - H - HZMD 6508				- 6500		2816
Fitting Position inner						
BPW - H - HZMD 6510				- 6500		2817
Fitting Position inner						
BPW - H - HZMD 8010				- 8000		2818
Fitting Position inner						
BPW - H - HZMD 8010-15				- 8000		2819
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HZMD 9008-15				- 9000		2820
Fitting Position inner						
BPW - H - HZMD 9010				- 9000		2821
Fitting Position inner						
BPW - H - HZMD 9010-15				- 9000		2822
Fitting Position inner						
BPW - H - HZMDH 9010-15				- 9000		2824
Fitting Position inner						
BPW - H - HZMDHOT 9010				- 9000		2827
Fitting Position inner						
BPW - H - HZMDO 6510 D30				- 6500		2830
Fitting Position inner						
BPW - H - HZMDO 9010				- 9000		2831
Fitting Position inner						
BPW - H - HZMDO 9010 D36				- 9000		2832
Fitting Position inner						
BPW - H - HZMDOM 9010				- 9000		2834
Fitting Position inner						
BPW - H - HZMDOM 9010 D36				- 9000		2835
Fitting Position inner						
BPW - H - HZMDOMN 9010 D30				- 9000		2836
Fitting Position inner						
BPW - H - HZMDOMR 9010				- 9000		2839
Fitting Position inner						
BPW - H - HZMDOR 9010				- 9000		2844
Fitting Position inner						
BPW - H - HZMDORU 9010				- 9000		2846
Fitting Position inner						
BPW - H - HZMDOU 9010				- 9000		2847
Fitting Position inner						
BPW - H - HZMDSS 2/8010/12				- 8000		2849
Fitting Position inner						
BPW - H - HZMDVO 8010 A				- 8000		2850
Fitting Position inner						
BPW - H - HZMDVO 9010 A				- 9000		2851
Fitting Position inner						
BPW - H - HZMDVOU 8010 A				- 8000		2854
Fitting Position inner						
BPW - H - HZMDVOU 9010 A				- 9000		2855
Fitting Position inner						
BPW - H - HZMH 6510				- 6500		2868
Fitting Position inner						
BPW - H - HZMH 9010-15				- 9000		2869
Fitting Position inner						
BPW - H - HZMH 9010-15 ECO				- 9000		2870
Fitting Position inner						
BPW - H - HZMHLL 9010/12° ECO-MAXX				- 9000		2871
Fitting Position inner						
BPW - H - HZMHLS 8010/10°				- 8000		2872
Fitting Position inner						
BPW - H - HZMHOT 6510 D30				- 6500		2878
Fitting Position inner						
BPW - H - HZMHOT 9010 D36				- 9000		2879
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - H - HZMHOTA 9010				- 9000		2885
Fitting Position inner						
BPW - H - HZMLS 8010/10°				- 8000		2891
Fitting Position inner						
BPW - H - HZMOM 9010				- 9000		2900
Fitting Position inner						
BPW - H - HZMOMN 9010 D36				- 9000		2902
Fitting Position inner						
BPW - H - HZMOMR 9010				- 9000		2905
Fitting Position inner						
BPW - H - HZMOMR 9010 D36				- 9000		2906
Fitting Position inner						
BPW - H - HZMOR 9010				- 9000		2912
Fitting Position inner						
BPW - H - HZMVB 8010 K				- 8000		2924
Fitting Position inner						
BPW - H - HZO 9010				- 9000		2933
Fitting Position inner						
BPW - H - HZOMA 9010				- 9000		2936
Fitting Position inner						
BPW - H - HZOMN 9010 D30 7/8 IN				- 9000		2937
Fitting Position inner						
BPW - H - HZOMR 9010				- 9000		2939
Fitting Position inner						
BPW - H - HZOMR 9010 D36				- 9000		2940
Fitting Position inner						
BPW - H - HZOR 6510				- 6500		2945
Fitting Position inner						
BPW - H - HZOR 9010				- 9000		2946
Fitting Position inner						
BPW - H - HZSS 2/8010/12				- 8000		2950
Fitting Position inner						
BPW - H - HZVB 8010 K				- 8000		2960
Fitting Position inner						
BPW - H - HXZH 9100				- 9100		3752
Fitting Position inner						
BPW - H - HLKSF 9010 EC0				- 9000		3753
Fitting Position inner						
BPW - H - HSFLS 8010/max. 26,5°				- 8000		3754
Fitting Position inner						
BPW - H - HLKS 9010				- 9000		3755
Fitting Position inner						
BPW - H - HLKSM 9010				- 9000		3756
Fitting Position inner						
BPW - H - HLKSF 9010				- 9000		3759
Fitting Position inner						
BPW - H - HBMLS 8010/15°				- 8000		3893
Fitting Position inner						
BPW - H - HLKZF 9010				- 9000		3894
Fitting Position inner						
BPW - H - HSFD 9010				- 9000		3895
Fitting Position inner						
BPW - H - HSMH 9010-15 ECO Plus				- 9000		4058
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - KH - KHSF 9008-15 ECO				- 9000		37
Fitting Position inner						
BPW - KH - KHSF 9008-15 ECO-MAXX				- 9000		38
Fitting Position inner						
BPW - KH - KHSF 9010				- 9000		39
Fitting Position inner						
BPW - KH - KHSF 9010 ECO				- 9000		40
Fitting Position inner						
BPW - KH - KHSF 9010 ECO-MAXX				- 9000		42
Fitting Position inner						
BPW - KH - KHSF 9010/3				- 9000		43
Fitting Position inner						
BPW - KH - KHSF 9010/3 ECO				- 9000		44
Fitting Position inner						
BPW - KH - KHSF 9010/3 ECO-MAXX				- 9000		45
Fitting Position inner						
BPW - KH - KHSF 9010/3-15 ECO				- 9000		46
Fitting Position inner						
BPW - KH - KHSF 9010/3-15 ECO-MAXX				- 9000		47
Fitting Position inner						
BPW - KH - KHSF 9010-15				- 9000		48
Fitting Position inner						
BPW - KH - KHSF 9010-15 ECO-MAXX				- 9000		49
Fitting Position inner						
BPW - KH - KHSFA 8010/3 ECO				- 8000		50
Fitting Position inner						
BPW - KH - KHSFA 9010/3 ECO				- 9000		51
Fitting Position inner						
BPW - KH - KHSFB 9010-15				- 9000		52
Fitting Position inner						
BPW - KH - KHSFH 9008				- 9000		57
Fitting Position inner						
BPW - KH - KHSFH 9008 ECO				- 9000		58
Fitting Position inner						
BPW - KH - KHSFH 9008 ECO-MAXX				- 9000		59
Fitting Position inner						
BPW - KH - KHSFH 9008-15				- 9000		60
Fitting Position inner						
BPW - KH - KHSFH 9008-15 ECO				- 9000		61
Fitting Position inner						
BPW - KH - KHSFH 9008-15 ECO-MAXX				- 9000		62
Fitting Position inner						
BPW - KH - KHSFH 9010				- 9000		63
Fitting Position inner						
BPW - KH - KHSFH 9010 ECO				- 9000		64
Fitting Position inner						
BPW - KH - KHSFH 9010 ECO-MAXX				- 9000		65
Fitting Position inner						
BPW - KH - KHSFH 9010/3 ECO				- 9000		66
Fitting Position inner						
BPW - KH - KHSFH 9010/3 ECO-MAXX				- 9000		67
Fitting Position inner						
BPW - KH - KHSFH 9010-15				- 9000		68
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - KH - KHSFH 9010-15 ECO				- 9000		69
Fitting Position inner						
BPW - KH - KHSFHLL 9008/12°				- 9000		70
Fitting Position inner						
BPW - KH - KHSFHLL 9008/12° ECO				- 9000		71
Fitting Position inner						
BPW - KH - KHSFHLL 9008/12° ECO-MAXX				- 9000		72
Fitting Position inner						
BPW - KH - KHSFHLL 9010/12° ECO				- 9000		73
Fitting Position inner						
BPW - KH - KHSFHLL 9010/12° ECO-MAXX				- 9000		74
Fitting Position inner						
BPW - KH - KHSFHLL 9010/3 12° ECO				- 9000		75
Fitting Position inner						
BPW - KH - KHSFHLL 9010/3 12° ECO-MAXX				- 9000		76
Fitting Position inner						
BPW - KH - KHSFHP 9010				- 9000		77
Fitting Position inner						
BPW - KH - KHSFLL 9008/12°				- 9000		78
Fitting Position inner						
BPW - KH - KHSFLL 9008/12° ECO				- 9000		79
Fitting Position inner						
BPW - KH - KHSFLL 9008/12° ECO-MAXX				- 9000		80
Fitting Position inner						
BPW - KH - KHSFLL 9008/15° ECO				- 9000		81
Fitting Position inner						
BPW - KH - KHSFLL 9008/15° ECO-MAXX				- 9000		82
Fitting Position inner						
BPW - KH - KHSFLL 9010/12°				- 9000		83
Fitting Position inner						
BPW - KH - KHSFLL 9010/12° ECO				- 9000		84
Fitting Position inner						
BPW - KH - KHSFLL 9010/3 12° ECO-MAXX				- 9000		85
Fitting Position inner						
BPW - KH - KHSFOT 9008 D36-1 ECO				- 9000		87
Fitting Position inner						
BPW - KH - KHSFP 9010				- 9000		88
Fitting Position inner						
BPW - KH - KHSL 9010/3 MAXX				- 9000		89
Fitting Position inner						
BPW - KH - KHSM 8010/3 ECO				- 8000		92
Fitting Position inner						
BPW - KH - KHSM 9008				- 9000		93
Fitting Position inner						
BPW - KH - KHSM 9008 ECO				- 9000		94
Fitting Position inner						
BPW - KH - KHSM 9008 ECO-MAXX				- 9000		95
Fitting Position inner						
BPW - KH - KHSM 9008-15				- 9000		96
Fitting Position inner						
BPW - KH - KHSM 9008-15 ECO				- 9000		97
Fitting Position inner						
BPW - KH - KHSM 9010				- 9000		98
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - KH - KHSM 9010 ECO				- 9000		99
Fitting Position inner						
BPW - KH - KHSM 9010/3-15 ECO-MAXX				- 9000		100
Fitting Position inner						
BPW - KH - KHSM 9010-15				- 9000		101
Fitting Position inner						
BPW - KH - KHSMA 8010/3				- 8000		102
Fitting Position inner						
BPW - KH - KHSMA 8010/3 ECO				- 8000		103
Fitting Position inner						
BPW - KH - KHSMA 9010/3				- 9000		104
Fitting Position inner						
BPW - KH - KHSMH 9008 ECO				- 9000		105
Fitting Position inner						
BPW - KH - KHSMH 9008-15				- 9000		106
Fitting Position inner						
BPW - KH - KHSMH 9008-15 ECO				- 9000		107
Fitting Position inner						
BPW - KH - KHSMH 9010 ECO				- 9000		108
Fitting Position inner						
BPW - KH - KHSMH 9010/3 ECO				- 9000		109
Fitting Position inner						
BPW - KH - KHSMH 9010/3 ECO-MAXX				- 9000		110
Fitting Position inner						
BPW - KH - KHSMHLL 9008/12°				- 9000		111
Fitting Position inner						
BPW - KH - KHSMHLL 9008/12° ECO				- 9000		112
Fitting Position inner						
BPW - KH - KHSMLL 9008/12° ECO				- 9000		113
Fitting Position inner						
BPW - KH - KHSMP 9010				- 9000		114
Fitting Position inner						
BPW - KH - KHZ 9000 ECO				- 9000		116
Fitting Position inner						
BPW - KH - KHZD 9010-15				- 9000		117
Fitting Position inner						
BPW - KH - KHZF 9008				- 9000		144
Fitting Position inner						
BPW - KH - KHZF 9008 ECO				- 9000		145
Fitting Position inner						
BPW - KH - KHZF 9008 ECO-MAXX				- 9000		146
Fitting Position inner						
BPW - KH - KHZF 9008-15				- 9000		147
Fitting Position inner						
BPW - KH - KHZF 9008-15 ECO				- 9000		148
Fitting Position inner						
BPW - KH - KHZF 9008-15 ECO-MAXX				- 9000		149
Fitting Position inner						
BPW - KH - KHZF 9010				- 9000		150
Fitting Position inner						
BPW - KH - KHZF 9010 ECO				- 9000		151
Fitting Position inner						
BPW - KH - KHZF 9010 ECO-MAXX				- 9000		152
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - KH - KHZF 9010-15				- 9000		153
Fitting Position inner						
BPW - KH - KHZF 9010-15 ECO				- 9000		154
Fitting Position inner						
BPW - KH - KHZF 9010-15 ECO-MAXX				- 9000		155
Fitting Position inner						
BPW - KH - KHZF 9010-15 MAXX				- 9000		156
Fitting Position inner						
BPW - KH - KHZFB 9010-15				- 9000		158
Fitting Position inner						
BPW - KH - KHZFD 8008				- 8000		163
Fitting Position inner						
BPW - KH - KHZFD 8010				- 8000		164
Fitting Position inner						
BPW - KH - KHZFD 9008				- 9000		165
Fitting Position inner						
BPW - KH - KHZFD 9008-15				- 9000		166
Fitting Position inner						
BPW - KH - KHZFD 9010				- 9000		167
Fitting Position inner						
BPW - KH - KHZFD 9010-10				- 9000		168
Fitting Position inner						
BPW - KH - KHZFD 9010-15				- 9000		169
Fitting Position inner						
BPW - KH - KHZFDH 8010				- 8000		172
Fitting Position inner						
BPW - KH - KHZFDH 9008-15				- 9000		173
Fitting Position inner						
BPW - KH - KHZFDH 9010				- 9000		174
Fitting Position inner						
BPW - KH - KHZFDH 9010-15				- 9000		175
Fitting Position inner						
BPW - KH - KHZFDH 9708-15				- 9700		176
Fitting Position inner						
BPW - KH - KHZFDLL 9010/20°				- 9000		178
Fitting Position inner						
BPW - KH - KHZFH 9008 ECO				- 9000		219
Fitting Position inner						
BPW - KH - KHZFH 9010 ECO				- 9000		220
Fitting Position inner						
BPW - KH - KHZFH 9010 ECO-MAXX				- 9000		221
Fitting Position inner						
BPW - KH - KHZFH 9010-15				- 9000		222
Fitting Position inner						
BPW - KH - KHZFH 9010-15 ECO				- 9000		223
Fitting Position inner						
BPW - KH - KHZFH 9010-15 ECO-MAXX				- 9000		224
Fitting Position inner						
BPW - KH - KHZFOT 9010 D36 ECO				- 9000		225
Fitting Position inner						
BPW - KH - KHZFOT 9010 D36-1 ECO				- 9000		226
Fitting Position inner						
BPW - KH - KHZFP 9010				- 9000		227
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - KH - KHZH 9000 ECO				- 9000		228
Fitting Position inner						
BPW - KH - KHZH 9010 ECO				- 9000		229
Fitting Position inner						
BPW - KH - KHZM 9008				- 9000		246
Fitting Position inner						
BPW - KH - KHZM 9008 ECO				- 9000		247
Fitting Position inner						
BPW - KH - KHZM 9008-15				- 9000		248
Fitting Position inner						
BPW - KH - KHZM 9008-15 ECO				- 9000		249
Fitting Position inner						
BPW - KH - KHZM 9010				- 9000		250
Fitting Position inner						
BPW - KH - KHZM 9010 ECO				- 9000		251
Fitting Position inner						
BPW - KH - KHZMA 8008				- 8000		252
Fitting Position inner						
BPW - KH - KHZMA 8008 ECO				- 8000		253
Fitting Position inner						
BPW - KH - KHZMA 9008 ECO				- 9000		254
Fitting Position inner						
BPW - KH - KHZMA 9008-15				- 9000		255
Fitting Position inner						
BPW - KH - KHZMA 9008-15 ECO				- 9000		256
Fitting Position inner						
BPW - KH - KHZMD 9008				- 9000		260
Fitting Position inner						
BPW - KH - KHZMD 9008-15				- 9000		261
Fitting Position inner						
BPW - KH - KHZMD 9010				- 9000		262
Fitting Position inner						
BPW - KH - KHZMD 9010-15				- 9000		263
Fitting Position inner						
BPW - KH - KHZMDB 9010-15				- 9000		264
Fitting Position inner						
BPW - KH - KHZMDH 9008-15				- 9000		266
Fitting Position inner						
BPW - KH - KHZMDLS 8008				- 8000		267
Fitting Position inner						
BPW - KH - KHZMP 9010				- 9000		273
Fitting Position inner						
BPW - KH - KHSMHLL 9008/12° ECO-MAXX				- 9000		3920
Fitting Position inner						
BPW - KH - KHS 9010/3 ECO Plus2				- 9000		4217
Fitting Position inner						
BPW - KH - KHSF 9010 ECO Plus2				- 9000		4218
Fitting Position inner						
BPW - KM - KMBM 7008				- 7000		277
Fitting Position inner						
BPW - KM - KMBMH 7008				- 7000		280
Fitting Position inner						
BPW - KM - KMBMH 7008 gekröpft				- 7000		281
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - KR - KRZD 9008-17				- 9000		403
Fitting Position inner						
BPW - KR - KRZD 9010				- 9000		404
Fitting Position inner						
BPW - KR - KRZD 9010-17				- 9000		405
Fitting Position inner						
BPW - KR - KRZDB 9010-17				- 9000		406
Fitting Position inner						
BPW - KR - KRZDH 9010-17				- 9000		408
Fitting Position inner						
BPW - KR - KRZF 9010-17 ECO-MAXX				- 9000		425
Fitting Position inner						
BPW - KR - KRZFD 9008				- 9000		429
Fitting Position inner						
BPW - KR - KRZFD 9010-17				- 9000		430
Fitting Position inner						
BPW - KR - KRZFDH 9010-17				- 9000		432
Fitting Position inner						
BPW - KR - KRZFH 9010-17				- 9000		438
Fitting Position inner						
BPW - KR - KRZFH 9010-17 ECO				- 9000		439
Fitting Position inner						
BPW - KR - KRZFH 9010-17 ECO-MAXX				- 9000		440
Fitting Position inner						
BPW - KR - KRZM 9010-17 ECO				- 9000		449
Fitting Position inner						
BPW - KR - KRZMD 8008				- 8000		456
Fitting Position inner						
BPW - KR - KRZMD 8010				- 8000		457
Fitting Position inner						
BPW - KR - KRZMD 9008				- 9000		458
Fitting Position inner						
BPW - KR - KRZMD 9008-17				- 9000		459
Fitting Position inner						
BPW - KR - KRZMD 9010				- 9000		460
Fitting Position inner						
BPW - KR - KRZMD 9010-17				- 9000		461
Fitting Position inner						
BPW - KR - KRZMDB 9010-17				- 9000		462
Fitting Position inner						
BPW - KR - KRZMDH 9008-17				- 9000		466
Fitting Position inner						
BPW - KR - KRZMDH 9010-17				- 9000		467
Fitting Position inner						
BPW - KR - KRZMDHOT 9010 D36				- 9000		470
Fitting Position inner						
BPW - KR - KRZMDSS 2/9008				- 9000		499
Fitting Position inner						
BPW - KR - KRSF 9008-17 ECO				- 9000		3749
Fitting Position inner						
BPW - NH - NH 8010				- 8000		644
Fitting Position inner						
BPW - NH - NH 9010				- 9000		645
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - NH - NHS 9008				- 9000		650
Fitting Position inner						
BPW - NH - NHS 9008 ECO				- 9000		651
Fitting Position inner						
BPW - NH - NHSF 9010 ECO				- 9000		658
Fitting Position inner						
BPW - NH - NHSF 9010 ECO-MAXX				- 9000		659
Fitting Position inner						
BPW - NH - NHSF 9010-15 ECO				- 9000		660
Fitting Position inner						
BPW - NH - NHSFLL 9010				- 9000		664
Fitting Position inner						
BPW - NH - NHSFLL 9010/20° ECO-MAXX				- 9000		665
Fitting Position inner						
BPW - NH - NHZDHL 8010/15°				- 8000		673
Fitting Position inner						
BPW - NH - NHZDLL 8010				- 8000		674
Fitting Position inner						
BPW - NH - NHZDLL 8010/20°				- 8000		675
Fitting Position inner						
BPW - NH - NHZDLL 9010/15°				- 9000		676
Fitting Position inner						
BPW - NH - NHZDLS 8010				- 8000		677
Fitting Position inner						
BPW - NH - NHZDLS 9010/15°				- 9000		678
Fitting Position inner						
BPW - NH - NHZF 8010 ECO				- 8000		692
Fitting Position inner						
BPW - NH - NHZF 8010 ECO-MAXX				- 8000		693
Fitting Position inner						
BPW - NH - NHZF 9010				- 9000		694
Fitting Position inner						
BPW - NH - NHZF 9010 ECO				- 9000		695
Fitting Position inner						
BPW - NH - NHZF 9010 ECO-MAXX				- 9000		696
Fitting Position inner						
BPW - NH - NHZF 9010-15				- 9000		697
Fitting Position inner						
BPW - NH - NHZF 9010-15 ECO				- 9000		698
Fitting Position inner						
BPW - NH - NHZF 9010-15 ECO-MAXX				- 9000		699
Fitting Position inner						
BPW - NH - NHZFDLL 8010				- 8000		700
Fitting Position inner						
BPW - NH - NHZFDLL 8010/15°				- 8000		701
Fitting Position inner						
BPW - NH - NHZFDLL 8010/18°				- 8000		702
Fitting Position inner						
BPW - NH - NHZFDLL 8010/20°				- 8000		703
Fitting Position inner						
BPW - NH - NHZFDLL 9010/15°				- 9000		704
Fitting Position inner						
BPW - NH - NHZFDLL 9010/20°				- 9000		705
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - NH - NHZFH 8510-15 ECO-MAXX				- 8500		716
Fitting Position inner						
BPW - NH - NHZFH 9010				- 9000		717
Fitting Position inner						
BPW - NH - NHZFH 9010 ECO				- 9000		718
Fitting Position inner						
BPW - NH - NHZFH 9010 ECO-MAXX				- 9000		719
Fitting Position inner						
BPW - NH - NHZFH 9010-15				- 9000		720
Fitting Position inner						
BPW - NH - NHZFH 9010-15 ECO				- 9000		721
Fitting Position inner						
BPW - NH - NHZFH 9010-15 ECO-MAXX				- 9000		722
Fitting Position inner						
BPW - NH - NHZFLL 9010/15°				- 9000		723
Fitting Position inner						
BPW - NH - NHZFLL 9010/20°				- 9000		724
Fitting Position inner						
BPW - NH - NHZFOT 9010 D36				- 9000		725
Fitting Position inner						
BPW - NH - NHZFOT 9010 D36-1 ECO				- 9000		726
Fitting Position inner						
BPW - NH - NHZLS 8010				- 8000		729
Fitting Position inner						
BPW - NH - NHZM 9010				- 9000		743
Fitting Position inner						
BPW - NH - NHZM 9010 ECO				- 9000		744
Fitting Position inner						
BPW - NH - NHZM 9010 ECO-MAXX				- 9000		745
Fitting Position inner						
BPW - NH - NHZM 9010-15				- 9000		746
Fitting Position inner						
BPW - NH - NHZM 9010-15 ECO				- 9000		747
Fitting Position inner						
BPW - NH - NHZM 9010-15 ECO-MAXX				- 9000		748
Fitting Position inner						
BPW - NH - NHZMDHLS 8010/18(20)°				- 8000		749
Fitting Position inner						
BPW - NH - NHZMDLL 8010				- 8000		750
Fitting Position inner						
BPW - NH - NHZMDLL 8010/17°				- 8000		751
Fitting Position inner						
BPW - NH - NHZMDLL 8010/20°				- 8000		752
Fitting Position inner						
BPW - NH - NHZMDLS 8010				- 8000		753
Fitting Position inner						
BPW - NH - NHZMDLS 8010/12°				- 8000		754
Fitting Position inner						
BPW - NH - NHZMDLS 8010/15°				- 8000		755
Fitting Position inner						
BPW - NH - NHZMH 9010 ECO-MAXX				- 9000		759
Fitting Position inner						
BPW - NH - NHZMLS 8010				- 8000		760
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - NR - NRXZ 8010				- 8000		1000
Fitting Position inner						
BPW - NR - NRXZ 9000				- 9000		1001
Fitting Position inner						
BPW - NR - NRXZ 9000-17				- 9000		1002
Fitting Position inner						
BPW - NR - NRXZ 9010				- 9000		1003
Fitting Position inner						
BPW - NR - NRXZ 9010-17				- 9000		1004
Fitting Position inner						
BPW - NR - NRZ 7006				- 7000		1035
Fitting Position inner						
BPW - NR - NRZ 8008				- 8000		1036
Fitting Position inner						
BPW - NR - NRZ 8010				- 8000		1037
Fitting Position inner						
BPW - NR - NRZ 9000-17				- 9000		1038
Fitting Position inner						
BPW - NR - NRZ 9000-17 ECO				- 9000		1039
Fitting Position inner						
BPW - NR - NRZ 9008				- 9000		1040
Fitting Position inner						
BPW - NR - NRZ 9010				- 9000		1041
Fitting Position inner						
BPW - NR - NRZ 9010 gekröpft				- 9000		1042
Fitting Position inner						
BPW - NR - NRZ 9010 gekröpft ECO				- 9000		1043
Fitting Position inner						
BPW - NR - NRZ 9010 ECO				- 9000		1044
Fitting Position inner						
BPW - NR - NRZ 9010-17				- 9000		1045
Fitting Position inner						
BPW - NR - NRZ 9010-17 ECO				- 9000		1046
Fitting Position inner						
BPW - NR - NRZ 9110				- 9100		1047
Fitting Position inner						
BPW - NR - NRZD 7006				- 7000		1058
Fitting Position inner						
BPW - NR - NRZD 7006-17				- 7000		1059
Fitting Position inner						
BPW - NR - NRZD 8008				- 8000		1060
Fitting Position inner						
BPW - NR - NRZD 8010				- 8000		1061
Fitting Position inner						
BPW - NR - NRZD 9008				- 9000		1062
Fitting Position inner						
BPW - NR - NRZD 9010				- 9000		1063
Fitting Position inner						
BPW - NR - NRZD 9010-17				- 9000		1064
Fitting Position inner						
BPW - NR - NRZDH 8010				- 8000		1071
Fitting Position inner						
BPW - NR - NRZDH 9010				- 9000		1072
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - NR - NRZDH 9010-17				- 9000		1073
Fitting Position inner						
BPW - NR - NRZDHOT 8010				- 8000		1083
Fitting Position inner						
BPW - NR - NRZDHOT 9010				- 9000		1084
Fitting Position inner						
BPW - NR - NRZDHOT 9010 D36				- 9000		1085
Fitting Position inner						
BPW - NR - NRZDHOT 9010 D36-1				- 9000		1086
Fitting Position inner						
BPW - NR - NRZDHOTU 8010				- 8000		1091
Fitting Position inner						
BPW - NR - NRZDHOTU 9010				- 9000		1092
Fitting Position inner						
BPW - NR - NRZDO 8008 D30				- 8000		1097
Fitting Position inner						
BPW - NR - NRZDO 8010				- 8000		1098
Fitting Position inner						
BPW - NR - NRZDO 8010 D30				- 8000		1099
Fitting Position inner						
BPW - NR - NRZDOM 8010				- 8000		1104
Fitting Position inner						
BPW - NR - NRZDOM 9010				- 9000		1105
Fitting Position inner						
BPW - NR - NRZDOMN 8008 D36				- 8000		1108
Fitting Position inner						
BPW - NR - NRZDOMN 8010 D36				- 8000		1109
Fitting Position inner						
BPW - NR - NRZDOMR 8010				- 8000		1115
Fitting Position inner						
BPW - NR - NRZDOMR 8010 D36				- 8000		1116
Fitting Position inner						
BPW - NR - NRZDOMR 9010				- 9000		1117
Fitting Position inner						
BPW - NR - NRZDOMR 9010 D36				- 9000		1118
Fitting Position inner						
BPW - NR - NRZDOR 8010				- 8000		1120
Fitting Position inner						
BPW - NR - NRZDOR 9010 D36				- 9000		1121
Fitting Position inner						
BPW - NR - NRZDOT 8008 D36				- 8000		1138
Fitting Position inner						
BPW - NR - NRZDOT 8010				- 8000		1139
Fitting Position inner						
BPW - NR - NRZDOT 8010 D30				- 8000		1140
Fitting Position inner						
BPW - NR - NRZDOT 8010 D36				- 8000		1141
Fitting Position inner						
BPW - NR - NRZDOT 9010 D36				- 9000		1142
Fitting Position inner						
BPW - NR - NRZDOT 9010 D36-1				- 9000		1143
Fitting Position inner						
BPW - NR - NRZDOTA 8008 D36				- 8000		1147
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - NR - NRZDOTR 8008 D36				- 8000		1157
Fitting Position inner						
BPW - NR - NRZDOTR 8010 D36				- 8000		1158
Fitting Position inner						
BPW - NR - NRZDOTR 8010 D36-1				- 8000		1159
Fitting Position inner						
BPW - NR - NRZDOTR 9010 D36				- 9000		1160
Fitting Position inner						
BPW - NR - NRZDOTRA 8008 D36				- 8000		1161
Fitting Position inner						
BPW - NR - NRZDOTRU 9010 D36				- 9000		1162
Fitting Position inner						
BPW - NR - NRZDOTU 9010 D36				- 9000		1165
Fitting Position inner						
BPW - NR - NRZDSS 2/8010				- 8000		1167
Fitting Position inner						
BPW - NR - NRZDT 8010				- 8000		1169
Fitting Position inner						
BPW - NR - NRZDVBT 8010				- 8000		1178
Fitting Position inner						
BPW - NR - NRZDVBT 8010 K				- 8000		1179
Fitting Position inner						
BPW - NR - NRZDVO 9010				- 9000		1182
Fitting Position inner						
BPW - NR - NRZDVO 9010 A				- 9000		1183
Fitting Position inner						
BPW - NR - NRZDVOT 8010				- 8000		1184
Fitting Position inner						
BPW - NR - NRZDVOT 8010 A				- 8000		1185
Fitting Position inner						
BPW - NR - NRZF 8010				- 8000		1221
Fitting Position inner						
BPW - NR - NRZF 8010 B				- 8000		1222
Fitting Position inner						
BPW - NR - NRZF 9010				- 9000		1223
Fitting Position inner						
BPW - NR - NRZF 9010 B				- 9000		1224
Fitting Position inner						
BPW - NR - NRZF 9010 ECO				- 9000		1225
Fitting Position inner						
BPW - NR - NRZF 9010 ECO-MAXX				- 9000		1226
Fitting Position inner						
BPW - NR - NRZF 9010-17				- 9000		1227
Fitting Position inner						
BPW - NR - NRZF 9010-17 ECO				- 9000		1228
Fitting Position inner						
BPW - NR - NRZF 9010-20				- 9000		1229
Fitting Position inner						
BPW - NR - NRZF 9010-20 ECO				- 9000		1230
Fitting Position inner						
BPW - NR - NRZFD 8010				- 8000		1236
Fitting Position inner						
BPW - NR - NRZFD 9010				- 9000		1237
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - NR - NRZFD 9010-17				- 9000		1238
Fitting Position inner						
BPW - NR - NRZFDH 8010				- 8000		1241
Fitting Position inner						
BPW - NR - NRZFDH 9010				- 9000		1242
Fitting Position inner						
BPW - NR - NRZFDH 9010-17				- 9000		1243
Fitting Position inner						
BPW - NR - NRZFDOT 9010 D36				- 9000		1246
Fitting Position inner						
BPW - NR - NRZFH 8010				- 8000		1269
Fitting Position inner						
BPW - NR - NRZFH 8010-17				- 8000		1270
Fitting Position inner						
BPW - NR - NRZFH 9010				- 9000		1271
Fitting Position inner						
BPW - NR - NRZFH 9010-17				- 9000		1272
Fitting Position inner						
BPW - NR - NRZFH 9010-17 ECO				- 9000		1273
Fitting Position inner						
BPW - NR - NRZFH 9010-20				- 9000		1274
Fitting Position inner						
BPW - NR - NRZFHOT 9010 D36				- 9000		1278
Fitting Position inner						
BPW - NR - NRZFHOTU 9010 D36				- 9000		1280
Fitting Position inner						
BPW - NR - NRZFOT 8010 D30				- 8000		1286
Fitting Position inner						
BPW - NR - NRZFOT 8010 D36				- 8000		1287
Fitting Position inner						
BPW - NR - NRZFOT 8010 D36-1				- 8000		1288
Fitting Position inner						
BPW - NR - NRZFOT 9010 D36				- 9000		1289
Fitting Position inner						
BPW - NR - NRZFOT 9010 D36-1				- 9000		1290
Fitting Position inner						
BPW - NR - NRZFOT 9010 D36-P1				- 9000		1291
Fitting Position inner						
BPW - NR - NRZFOT 9010 E36				- 9000		1292
Fitting Position inner						
BPW - NR - NRZFOT 9010 E36K				- 9000		1293
Fitting Position inner						
BPW - NR - NRZFOT 9010 Y36				- 9000		1294
Fitting Position inner						
BPW - NR - NRZFOTR 8010 D36				- 8000		1296
Fitting Position inner						
BPW - NR - NRZFOTR 8010 D36-1				- 8000		1297
Fitting Position inner						
BPW - NR - NRZFOTR 9010 D36-1				- 9000		1298
Fitting Position inner						
BPW - NR - NRZFOTU 9010 D36-1				- 9000		1299
Fitting Position inner						
BPW - NR - NRZFVB 9010 BK				- 9000		1303
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - NR - NRZFVB 9010 K				- 9000		1304
Fitting Position inner						
BPW - NR - NRZFVB 8010 K				- 8000		1310
Fitting Position inner						
BPW - NR - NRZFVB 9010				- 9000		1311
Fitting Position inner						
BPW - NR - NRZFVB 9010 K				- 9000		1312
Fitting Position inner						
BPW - NR - NRZH 9010 gekröpft				- 9000		1325
Fitting Position inner						
BPW - NR - NRZM 8008				- 8000		1352
Fitting Position inner						
BPW - NR - NRZM 8010				- 8000		1353
Fitting Position inner						
BPW - NR - NRZM 9008-17				- 9000		1354
Fitting Position inner						
BPW - NR - NRZM 9010				- 9000		1355
Fitting Position inner						
BPW - NR - NRZM 9010 ECO				- 9000		1356
Fitting Position inner						
BPW - NR - NRZM 9010-17				- 9000		1357
Fitting Position inner						
BPW - NR - NRZM 9010-17 ECO				- 9000		1358
Fitting Position inner						
BPW - NR - NRZMD 7006				- 7000		1359
Fitting Position inner						
BPW - NR - NRZMD 7006				- 7000		1370
Fitting Position inner						
BPW - NR - NRZMD 8010				- 8000		1371
Fitting Position inner						
BPW - NR - NRZMD 9010				- 9000		1372
Fitting Position inner						
BPW - NR - NRZMD 9010-17				- 9000		1373
Fitting Position inner						
BPW - NR - NRZMD 9010-20				- 9000		1374
Fitting Position inner						
BPW - NR - NRZMDH 7008				- 7000		1382
Fitting Position inner						
BPW - NR - NRZMDH 8010				- 8000		1383
Fitting Position inner						
BPW - NR - NRZMDH 9010				- 9000		1384
Fitting Position inner						
BPW - NR - NRZMDH 9010-17				- 9000		1385
Fitting Position inner						
BPW - NR - NRZMDOM 8010				- 8000		1392
Fitting Position inner						
BPW - NR - NRZMDOMN 8010 D36				- 8000		1394
Fitting Position inner						
BPW - NR - NRZMDOMN 9010 D36				- 9000		1395
Fitting Position inner						
BPW - NR - NRZMDOMR 9010				- 9000		1397
Fitting Position inner						
BPW - NR - NRZMDOT 8010				- 8000		1402
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - R - RBFHLL 8010/15°				- 8000		1509
Fitting Position inner						
BPW - R - RBFL 8010/18°				- 8000		1510
Fitting Position inner						
BPW - R - RBFOT 7510 D30 gekröpft				- 7500		1511
Fitting Position inner						
BPW - R - RBFOT 7510 D36				- 7500		1512
Fitting Position inner						
BPW - R - RBFOT 7510 DF 30 gekröpft				- 7500		1513
Fitting Position inner						
BPW - R - RBFOT 7510 DF36				- 7500		1514
Fitting Position inner						
BPW - R - RBFOT 7510 T30				- 7500		1515
Fitting Position inner						
BPW - R - RBFOTA 7510 C30-1				- 7500		1516
Fitting Position inner						
BPW - R - RBFOTA 7510 D30				- 7500		1517
Fitting Position inner						
BPW - R - RBFOTA 7510 D36				- 7500		1518
Fitting Position inner						
BPW - R - RBFOTA 7510 D36-1				- 7500		1519
Fitting Position inner						
BPW - R - RBFOTA 7510 D36-1 gekröpft				- 7500		1520
Fitting Position inner						
BPW - R - RBFOTA 7510 T30				- 7500		1521
Fitting Position inner						
BPW - R - RBFOTA 7510 T30-1				- 7500		1522
Fitting Position inner						
BPW - R - RBFOTA 7510 T30-1 gekröpft				- 7500		1523
Fitting Position inner						
BPW - R - RBFOTA 7510 T36-1				- 7500		1524
Fitting Position inner						
BPW - R - RBFOTALL 8010 T 36-1/18°				- 8000		1525
Fitting Position inner						
BPW - R - RBM 6510				- 6500		1529
Fitting Position inner						
BPW - R - RBM 7510				- 7500		1530
Fitting Position inner						
BPW - R - RBM 8010				- 8000		1531
Fitting Position inner						
BPW - R - RBM 9010				- 9000		1532
Fitting Position inner						
BPW - R - RBMH 6510 gekröpft				- 6500		1533
Fitting Position inner						
BPW - R - RBMHOT 6510 D30 gekröpft				- 6500		1534
Fitting Position inner						
BPW - R - RBMHOT 6510 D36				- 6500		1535
Fitting Position inner						
BPW - R - RBMLL 8010/18°				- 8000		1536
Fitting Position inner						
BPW - R - RBMOTA 7510 D30				- 7500		1543
Fitting Position inner						
BPW - R - RBMOTALL 8010 D36-1/18°				- 8000		1544
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - R - RI 7500-17				- 7500		1547
Fitting Position inner						
BPW - R - RIOTA 7500 T30				- 7500		1548
Fitting Position inner						
BPW - R - RIZOT 9000				- 9000		1553
Fitting Position inner						
BPW - R - RIZ 9000-17				- 9000		1554
Fitting Position inner						
BPW - R - RS 8000				- 8000		1563
Fitting Position inner						
BPW - R - RS 8010				- 8000		1564
Fitting Position inner						
BPW - R - RS 9010				- 9000		1565
Fitting Position inner						
BPW - R - RS 9010-17				- 9000		1566
Fitting Position inner						
BPW - R - RSF 6510				- 6500		1582
Fitting Position inner						
BPW - R - RSF 8010				- 8000		1583
Fitting Position inner						
BPW - R - RSF 9010				- 9000		1584
Fitting Position inner						
BPW - R - RSF 9010 ECO				- 9000		1585
Fitting Position inner						
BPW - R - RSF 9010 ECO-MAXX				- 9000		1586
Fitting Position inner						
BPW - R - RSF 9010-17				- 9000		1587
Fitting Position inner						
BPW - R - RSF 9010-17 ECO				- 9000		1588
Fitting Position inner						
BPW - R - RSF 9010-17 ECO-MAXX				- 9000		1589
Fitting Position inner						
BPW - R - RSFH 8010-17 gekröpft				- 8000		1591
Fitting Position inner						
BPW - R - RSM 8010				- 8000		1604
Fitting Position inner						
BPW - R - RSM 8010-17				- 8000		1605
Fitting Position inner						
BPW - R - RSM 9010				- 9000		1606
Fitting Position inner						
BPW - R - RSM 9010 ECO				- 9000		1607
Fitting Position inner						
BPW - R - RSM 9010 ECO-MAXX				- 9000		1608
Fitting Position inner						
BPW - R - RSM 9010-17				- 9000		1609
Fitting Position inner						
BPW - R - RSMH 6510 gekröpft				- 6500		1615
Fitting Position inner						
BPW - R - RSMH 9010-17				- 9000		1616
Fitting Position inner						
BPW - R - RSMHOT 6510 gekröpft				- 6500		1617
Fitting Position inner						
BPW - R - RZ 9010-17				- 9000		1645
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - R - RZD 8008-17				- 8000		1647
Fitting Position inner						
BPW - R - RZF 6510				- 6500		1664
Fitting Position inner						
BPW - R - RZF 8010-17				- 8000		1665
Fitting Position inner						
BPW - R - RZF 9010				- 9000		1666
Fitting Position inner						
BPW - R - RZF 9010 ECO				- 9000		1667
Fitting Position inner						
BPW - R - RZF 9010-17				- 9000		1668
Fitting Position inner						
BPW - R - RZF 9010-17 ECO				- 9000		1669
Fitting Position inner						
BPW - R - RZF 9108-20				- 9100		1670
Fitting Position inner						
BPW - R - RZF 9110-20				- 9100		1671
Fitting Position inner						
BPW - R - RZFH 6510				- 6500		1674
Fitting Position inner						
BPW - R - RZFOTA 6510 D30				- 6500		1675
Fitting Position inner						
BPW - R - RZM 6510				- 6500		1682
Fitting Position inner						
BPW - R - RZM 9010				- 9000		1683
Fitting Position inner						
BPW - R - RZM 9010-17				- 9000		1684
Fitting Position inner						
BPW - R - RZM 9110-20				- 9100		1685
Fitting Position inner						
BPW - R - RZOT 9010				- 9000		1688
Fitting Position inner						
BPW - R - RSHM 9010-17				- 9000		3914
Fitting Position inner						
BPW - SH - SHSF 9010 ECO				- 9000		1723
Fitting Position inner						
BPW - SH - SHSF 9010 ECO-MAXX				- 9000		1725
Fitting Position inner						
BPW - SH - SHSF 9010-15 ECO				- 9000		1726
Fitting Position inner						
BPW - SH - SHSF 9010-15 ECO-MAXX				- 9000		1728
Fitting Position inner						
BPW - SH - SHSFA 8010 ECO-MAXX				- 8000		1729
Fitting Position inner						
BPW - SH - SHSFA 9010 ECO				- 9000		1730
Fitting Position inner						
BPW - SH - SHSFA 9010 ECO-MAXX				- 9000		1731
Fitting Position inner						
BPW - SH - SHSFA 9010-15 ECO-MAXX				- 9000		1732
Fitting Position inner						
BPW - SH - SHSM 9010 ECO				- 9000		1741
Fitting Position inner						
BPW - SH - SHSM 9010 ECO-MAXX				- 9000		1742
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - SH - SHSM 9010-15 ECO-MAXX				- 9000		1743
Fitting Position inner						
BPW - SH - SHSMA 9010 ECO				- 9000		1744
Fitting Position inner						
BPW - SH - SHZF 9010 ECO				- 9000		1756
Fitting Position inner						
BPW - SH - SHZF 9010 ECO-MAXX				- 9000		1757
Fitting Position inner						
BPW - SH - SHZF 9010-15 ECO				- 9000		1758
Fitting Position inner						
BPW - SH - SHZF 9010-15 ECO-MAXX				- 9000		1760
Fitting Position inner						
BPW - SH - SHZM 9010-15 ECO-MAXX				- 9000		1768
Fitting Position inner						
BPW - SH - SHZMA 9010-15 ECO-MAXX				- 9000		1769
Fitting Position inner						
BPW - SH - SHSFH 9010 ECO-MAXX				- 9000		3957
Fitting Position inner						
BPW - SKH - SKHBF 9010 ECO-MAXX				- 9000		1699
Fitting Position inner						
BPW - SKH - SKHBF 9010-15 ECO-MAXX				- 9000		1701
Fitting Position inner						
BPW - SKH - SKHBFHLL 9010 ECO-MAXX				- 9000		1703
Fitting Position inner						
BPW - SKH - SKHBM 9010-15 ECO-MAXX				- 9000		1706
Fitting Position inner						
BPW - SKH - SKHBMHLL 9010 ECO-MAXX				- 9000		1708
Fitting Position inner						
BPW - SKH - SKHSF 8010 ECO-MAXX				- 8000		1713
Fitting Position inner						
BPW - SKH - SKHSF 9008 ECO				- 9000		1714
Fitting Position inner						
BPW - SKH - SKHSF 9008 ECO-MAXX				- 9000		1716
Fitting Position inner						
BPW - SKH - SKHSF 9008-15 ECO-MAXX				- 9000		1717
Fitting Position inner						
BPW - SKH - SKHSF 9010 ECO-MAXX				- 9000		1720
Fitting Position inner						
BPW - SKH - SKHSF 9010-15 ECO-MAXX				- 9000		1722
Fitting Position inner						
BPW - SKH - SKHSFA 9010 ECO-MAXX				- 9000		1774
Fitting Position inner						
BPW - SKH - SKHSFA 9010-15 ECO-MAXX				- 9000		1775
Fitting Position inner						
BPW - SKH - SKHSFHLL 9008 ECO-MAXX				- 9000		1776
Fitting Position inner						
BPW - SKH - SKHSFHLL 9010 ECO-MAXX				- 9000		1778
Fitting Position inner						
BPW - SKH - SKHSM 9008 ECO-MAXX				- 9000		1781
Fitting Position inner						
BPW - SKH - SKHSM 9008-15 ECO-MAXX				- 9000		1783
Fitting Position inner						
BPW - SKH - SKHSM 9010 ECO-MAXX				- 9000		1785
Fitting Position inner						

Description	Axle Version	Axle Design	Wheel suspension	Axle Load [kg]	Brake type	TecDoc axle number
BPW - SKH - SKHSM 9010-15 ECO-MAXX				- 9000		1787
Fitting Position inner						
BPW - SKH - SKHSMA 9008-15 ECO-MAXX				- 9000		1788
Fitting Position inner						
BPW - SKH - SKHSMA 9010 ECO-MAXX				- 9000		1789
Fitting Position inner						
BPW - SKH - SKHSMA 9010-15 ECO-MAXX				- 9000		1790
Fitting Position inner						
BPW - SKH - SKHSMALL 9010 ECO-MAXX				- 9000		1791
Fitting Position inner						
BPW - SKH - SKHSMHLL 9010 ECO-MAXX				- 9000		1793
Fitting Position inner						
BPW - SKH - SKHZF 9008 ECO-MAXX				- 9000		1799
Fitting Position inner						
BPW - SKH - SKHZF 9008-15 ECO-MAXX				- 9000		1801
Fitting Position inner						
BPW - SKH - SKHZF 9010 ECO-MAXX				- 9000		1803
Fitting Position inner						
BPW - SKH - SKHZF 9010-15 ECO-MAXX				- 9000		1805
Fitting Position inner						
BPW - SKH - SKHZM 9010 ECO-MAXX				- 9000		1808
Fitting Position inner						
BPW - SKH - SKHZM 9010-15 ECO-MAXX				- 9000		1809
Fitting Position inner						
BPW - SKH - SKHZMA 9008-15 ECO-MAXX				- 9000		1810
Fitting Position inner						
BPW - SKH - SKHZMA 9010-15 ECO-MAXX				- 9000		1811
Fitting Position inner						

OE information

Manufacturer	OE number	Reference information
BPW	02.6408.80.00	
BPW	02.6410.24.00	
BPW	0902640880	
DAF	083 6586	
DAF	148 9089	
EVOBUS	012 981 40 05	
GIGANT	10500572	
MERCEDES-BENZ	012 981 40 05	
MERCEDES-BENZ	012 981 41 05	
MERCEDES-BENZ	017 981 49 05	
MERITOR	99041067	
SCANIA	1301694	
SCHMITZ CARGOBULL	12547	
SCHMITZ CARGOBULL	17062	